

Lithium iron phosphate battery  
Product Specifications  
51.2V 300Ah 15KWh LiFePO4 Battery



Product model: Lithium iron phosphate battery pack  
Product Specifications: 51.2V 300Ah (16S1P)

# Change Resume

| Version | Fix:<br>subscriber | Change content  | Date of<br>Revision | Reviewed by | Calibration      | Remark |
|---------|--------------------|-----------------|---------------------|-------------|------------------|--------|
| LN1.0   |                    | Newly increased |                     | He Tao      | Shao<br>Jingyang |        |
|         |                    |                 |                     |             |                  |        |
|         |                    |                 |                     |             |                  |        |
|         |                    |                 |                     |             |                  |        |
|         |                    |                 |                     |             |                  |        |
|         |                    |                 |                     |             |                  |        |
|         |                    |                 |                     |             |                  |        |

## Product acceptance and introduction

Proper use and maintenance of the product ensures long-term reliable and stable operation of your battery (or battery system) ,After receiving the product, please check whether the packaging is intact. If the packaging is damaged, the product may be damaged. If there is any damage, please contact our after- sales or sales staff within seven working days.

Anyone who fails to use or maintain it according to the provisions of this manual will be deemed to have waived the warranty right. We and its service station have the right not to provide warranty, and will not compensate for all losses arising therefrom, but can provide corresponding paid services according to the situation. Please reply within seven working days after your company receives the product and product manual. If there is no reply within seven working days, our company will treat the customer as acknowledging that this product and product manual meet your requirements.

## Wall-mounted Installation Guidelines

The weight of this battery pack is 120KG. Before installation, it is necessary to determine the load-bearing capacity of the wall through professional structural assessment and by referring to the wall's design parameters to ensure the safety of the installation.

It is recommended to choose solid brick walls or reinforced concrete walls as the installation walls, as these walls have relatively strong load-bearing capacity. For ordinary residential walls, if they are hollow brick walls, gypsum panel walls, or other lightweight partition walls, they may not be able to bear the weight of the equipment, which is likely to lead to potential safety hazards such as wall damage and even the equipment falling off.

# Product indicators

## 1.1 Product Overview

This product is a lithium iron battery pack. The battery pack consists of 16pcs 3.2V 300Ah lithium iron phosphate cells through 16 series and 1 parallel modes Combined. The battery pack adopts scientific internal structure design and advanced battery production technology. It has the characteristics of high specific energy and long life, safety and reliability, and wide operating temperature range. It is a green energy storage power supply product.

## 1.2 Pictures



## 1.3 Parameter

| Product name                | Project   | Parameter                             |  |
|-----------------------------|---|---------------------------------------|--|
| Battery cell                | Specifications and models   | 16pcs Lithium iron-300Ah              |  |
|                             | Nominal voltage   | 3.2 V                                 |  |
|                             | Nominal internal resistance   | $\leq 0.5 \text{ m}\Omega$            |  |
|                             | Combination method  | 16 series 1 parallel                  |  |
|                             | Matching criteria   |                                       | Tolerance $\leq 1\%$   |
|                             |   |                                       | Internal resistance range of single section $\leq 0.2 \text{ m}\Omega$ |
|                             |   |                                       | Single section voltage difference $\leq 5 \text{ mV}$                  |
|                             |   | Charge retention capacity $\geq 90\%$ |  |
| Finished product parameters | Nominal voltage (V)   | 51.2                                  |  |
|                             | Nominal Capacity (Ah)   | 300                                   |  |
|                             | Minimum Capacity (Ah)   | 300                                   |  |
|                             | Charge cut-off voltage (V)  | 58.4                                  |  |
|                             | Discharge cutoff voltage (V)  | 40                                    |  |
|                             | USB output voltage (V)  | Without                               |  |
|                             | USB Maximum Output Current (A)  | Without                               |  |
|                             | Maximum continuous discharge current (A)  | 200A                                  |  |
|                             | Display screen  | Voltage and percentage display        |  |
|                             | Standard charging current (A)   | Within 0.5 C                          |  |
|                             | Charge suitable for temperature   | 0°C ~45°C                             |  |
|                             | Discharge suitable temperature  | -20°C~60°C                            |  |
|                             | Battery pack size   | 822*242* 535mm                        |  |
|                             | Net weight of battery pack  | 120Kg                                 |  |
|                             | Storage Temperature Range   | 0°C ~40°C                             |  |
|                             | Storage Ambient Humidity (RH)   | < 75%                                 |  |
|                             | Communication method  | 485, 232, CAN, etc.                   |  |
| Feature Options             | 5A active equilibrium, Heating, Wifi  |                                       |  |
| Charge retention capacity   | After charging according to 3.2V standard charging, put it on hold for 28 days under standard test conditions, and then discharge according to 3.3V standard discharge, and the charge retention rate is $\geq 80\%$ .                                  |                                       |  |
| Number of cycles            | Cycle life not less than 8000 times, capacity retention rate $\geq 70\%$ . (Charge according to 3.2V standard charging and shelve for 0.5 to 1 hour ; discharge according to 3.3V standard discharge and shelve for 0.5 to 1 hour, counting one cycle). |                                       |  |
| Management System           | Single overvoltage protection value   | 3.7 V                                 |  |
|                             | Over pressure release value   | 3.65 V                                |  |
|                             | Single undervoltage protection value  | 2.5 V                                 |  |
|                             | Under voltage release value   | 2.7 V                                 |  |
|                             | Over current protection value   | 300A                                  |  |

2 BMS

Positive product physical picture



Reverse product physical picture



Switch communication board physical positive and negative picture



### **3. Functiondescription**

#### **3.1 Voltage detection and protection function**

It has the functions of overvoltage, low voltage alarm and overvoltage and undervoltage protection for single cell and battery pack.

#### **3.2 Current detection and protection function)**

It has the functions of charge and discharge current detection, alarm and protection. The upper computer displays negative current for discharge and positive current for charging.

#### **3.3 Short-circuit protection function**

It has the function of detection and protection of output short circuit.

#### **3.4 Temperature detection function**

With cell, environment, power MOS temperature detection, and can be charged and discharged in high temperature, low temperature alarm and protection. There are 4 channels of cell temperature detection, 1 channel of ambient temperature detection, 1 channel of power MOS temperature detector detection, and a total of 6 channels of NTCS.

#### **3.5 Temperature detection function**

The battery SOC can be calculated in real time. The full capacity and current capacity of the battery pack can be set by the upper computer for a complete charging and discharging cycle, and the post-cycle capacity can be automatically configured.

It has the function of calculating the number of charge and discharge cycles. When the cumulative discharge capacity of the battery pack reaches more than 80%, the number of cycles is increased once.

#### **3.6 Charge/discharge MOSFET switch function**

Low internal resistance, high current, for the backup power supply application of large capacity load boot, zero switching, high charging voltage resistance optimization design.

#### **3.7 Battery charging balancing function**

The charging balancing policy can be flexibly set (starting voltage and balancing voltage), which can effectively improve the battery life and cycle life.

#### **3.8 LED status indicator function**

It has 6 LED indicators, 4 remaining battery capacity indicators, 1 running indicator and 1 alarm protection status indicator.

#### **3.9 Key switch function**

One-button switch design, the system can be manually started when the shutdown state, when the standby state can be manually shut down.

#### **3.10 RS485 and CAN communication functions**

With RS485, CAN communication function, can realize the PC or intelligent front end through telemetry, remote communication, remote control, remote control and other commands to achieve battery data monitoring, operation control and parameter setting, to real-time monitoring BMS and battery pack status.

### 3.11 Upper computer control function

It can set various battery management parameters such as over and under voltage of single battery, over and under voltage of total battery, over current of charge, over current of discharge, over current of discharge, high and low temperature of battery cell, high and low temperature of environment, balancing strategy, number of battery series, and battery capacity. It can open and close discharge MOS, charge MOS, current limiting function switch, and buzzer alarm switch. Forced sleep switch and realize the system software online upgrade function.

### 3.12 Hardware voltage detection function

BMS design is equipped with unique hardware detection protection circuit. Ensure that the BMS can run safely and reliably for a long time under abnormal conditions.

### 3.13 Historical data storage function

The storage capacity of historical records is not less than 500 records, facilitating system monitoring, analysis, and maintenance.

### 3.14 Parallel communication function








It can realize the function of parallel communication through RS485 interface, with dip switch, which is used to set the address in parallel communication.

### 3.15 Charging current limiting function

It has 10A current limiting function. The current limiting mode includes passive current limiting mode and active current limiting mode. The default passive current limiting mode of this product is passive current limiting. Charging current greater than 110A start current limit.

### 3.16 LED indicator definition

LED lights: 4 green capacity indicators, one red alarm indicator, and one green running indicator

|  |   |   |   |  |  |   |   |
|--|---|---|---|--|--|---|---|
| SOC 1  | SOC 2   | SOC 3   | SOC 4   |  |  |   |   |
|             |  |  |  |  |  |  |  |
|  <b>SOC</b> |   |   |   |  |  | ALM   | RUN   |

| State                   | Charge      |        |         |        | Discharge    |       |       |       |
|-------------------------|-------------|--------|---------|--------|--------------|-------|-------|-------|
| Capacity indicato       | SOC 4       | SOC 3  | SOC 2   | SOC 1  | SOC 4        | SOC 3 | SOC 2 | SOC 1 |
| 0~25%                   | Blink2      | OFF    | OFF     | OFF    | ON           | OFF   | OFF   | OFF   |
| 25~50%                  | OFF         | Blink2 | OFF     | OFF    | ON           | ON    | OFF   | OFF   |
| 50~75%                  | OFF         | OFF    | Blink 2 | OFF    | ON           | ON    | ON    | OFF   |
| 75~100%                 | OFF         | OFF    | OFF     | Blink2 | ON           | ON    | ON    | ON    |
| Running indicator light | Stady light |        |         |        | Blink 3 tims |       |       |       |

### 3.17 RS485 communication

BMS can communicate with the upper computer through the RS485 communication interface, through the upper computer to view various information of the battery, such as voltage, current, temperature, SOC, SOH, working state, battery production information and can be set parameters.

The RS485 parallel port supports a maximum of 16 battery strings simultaneously. The default baud rate is 9600bps.

With upper computer/inverter communication RS485 interface, the default baud rate is 9600bps;

### 3.18 CAN communication

The BMS CAN communicate with the inverter through the CAN interface, and upload various information of the battery, such as voltage, current, temperature, SOC, SOH, working status, and battery production. The default baud rate is 500Kbps.

### 3.19 Bluetooth APP

You can view the voltage of each cell, total battery voltage, current, SOC, SOH, cell temperature, battery status, battery warning and other information. Click the battery icon or PACK information bar to jump to the device details interface.



Android




IOS

IOS: Search for "BMS Insight" on the App Store

Android: Download Link : <https://www.pgyer.com/b8uo9upa>

### 3.20 About WIFI

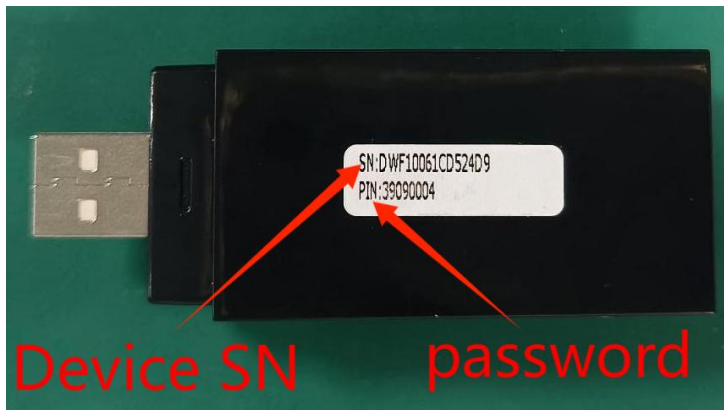

Step 1: Click the Bluetooth button to turn on the Bluetooth function.

(Note: The Bluetooth function and positioning function of the mobile phone must be turned on at the same time, and the location information must be allowed to be obtained)

Step 2: Search or find the SN of the device to be connected. The device SN is the SN code pasted on the shell.

(Note: If the module is powered on and the device is not searched, wait for 4 minutes)

Step 3: Click the device to be connected. If the connection is successful, it will automatically jump to the local monitoring interface.

The WIFI module can be configured through this interface.

① Enter the correct router account and password (the configured WIFI signal must be in the 2.4G frequency band, i.e. without the \_5G suffix).


② Click Configure.

③ Click Read. The currently configured WIFI account, password and module connection status are displayed above.


(Note: ① The router account and password must be in English characters. ② If the phone is not connected to the router, you need to manually enter the router account. If the phone is connected to the router, the account will be automatically displayed in the account input box.)

## 4 Communication interface definition

### 4.1 Interface diagram

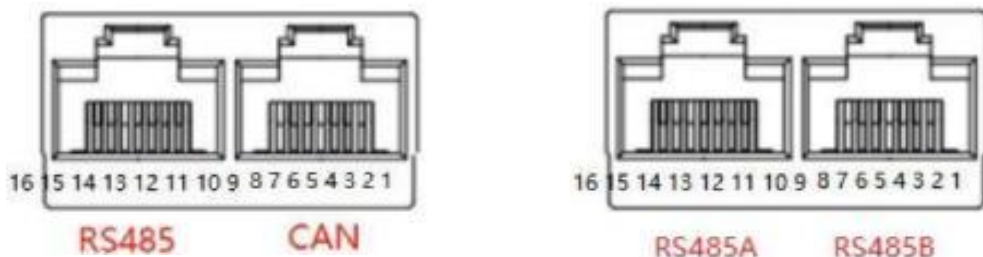

## 4.2 BMS interface definition

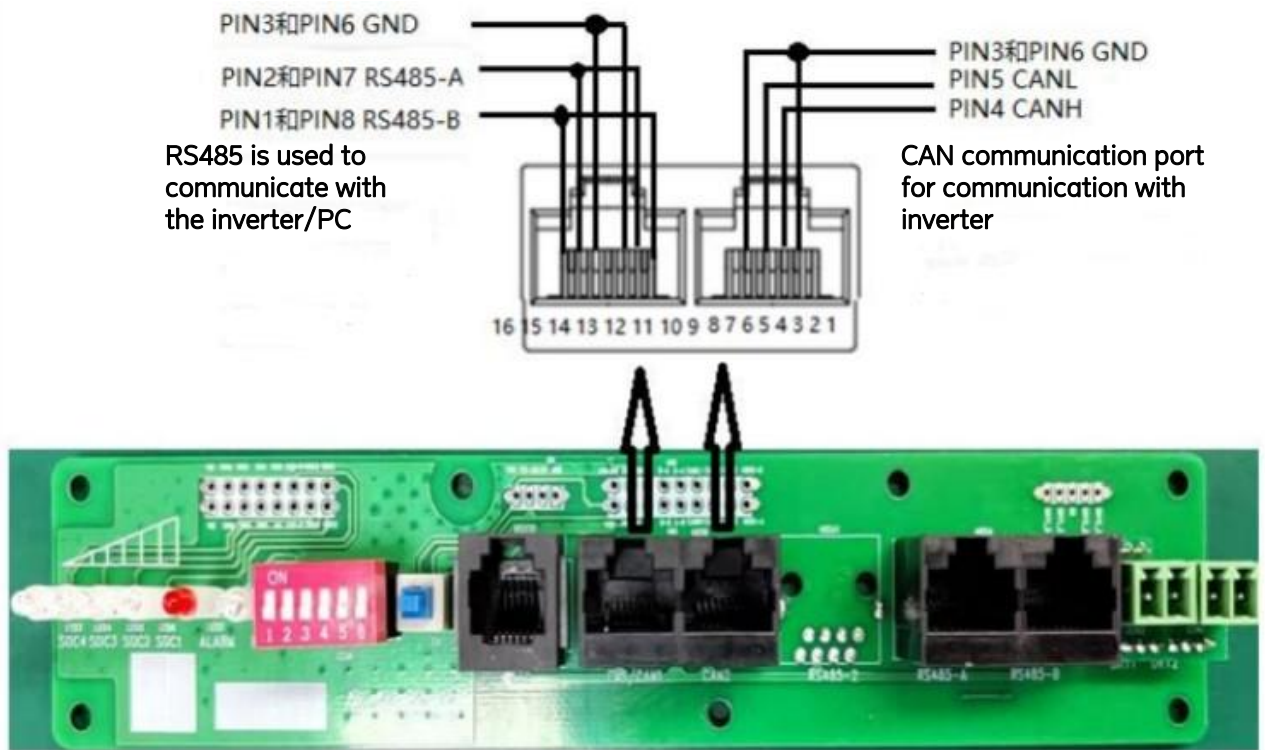


## 4.2 Communication interface definition

|   |                     |  |                     |
|---|---------------------|--|---------------------|
| RS485 interface<br>(communication with host computer or inverter)<br>Support for SRNE 、Voltronic and Geowatt inverter protocol--Select different addresses using DIP switches |                     | CAN communication interface<br>(only inverter communication)<br>Support for Victron 、Pylon and Geowatt inverter protocol--Use DIP switches to select different protocols |                     |
| RS485—Use 8P8C vertical RJ45 socket   |                     | CAN—Use 8P8C vertical RJ45 socket  |                     |
| RJ45 pin  | defined declaration | RJ45 pin   | defined declaration |
| 9、16  | RS485A-B            | 4  | CANH                |
| 10、15   | RS485A-A            | 5  | CANL                |
| 11、14   | GND                 | 3、6  | GND                 |
| 12、13   | NC                  | 1、2、7、8  | NC                  |

| Parallel communication port (for parallel only) |                     |                                       |                     |
|---|---------------------|---------------------------------------|---------------------|
| RS485-A—Use 8P8C vertical RJ45 socket           |                     | RS485-B—Use 8P8C vertical RJ45 socket |                     |
| RJ45 pin  | defined declaration | RJ45 pin                              | defined declaration |
| 9、16  | RS485B-B            | 1、8                                   | RS485B-B            |
| 10、15   | RS485B-A            | 2、7                                   | RS485B-A            |
| 11、14   | GND                 | 3、6                                   | GND                 |
| 12、13   | NC                  | 4、5                                   | NC                  |

### 4.3 BMS board parallel connection mode

The batteries are connected to each other using standard network cable.

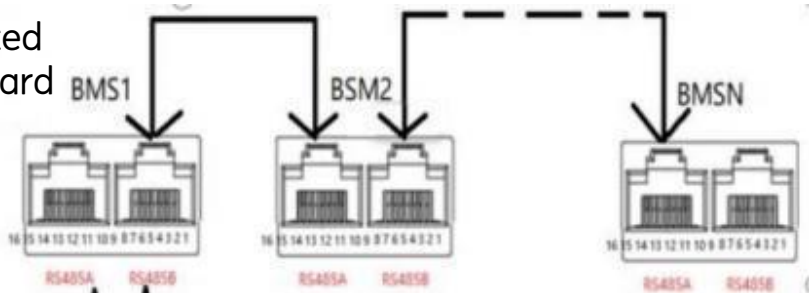

### 4.4 Dip switch setup (supports parallel and protocol selection)

When battery strings are connected in parallel, the hardware DIP address of each PACK is unique. The hardware address is set by the DIP switch on the board. See the following table.



| address | Dip switch position |     |     |     | reserved | Host | declaration |
|---------|---------------------|-----|-----|-----|----------|------|-------------|
|         | #1                  | #2  | #3  | #4  |          |      |             |
| 0       | OFF                 | OFF | OFF | OFF | OFF      | OFF  | Pack1       |
| 1       | ON                  | OFF | OFF | OFF | OFF      | OFF  | Pack2       |
| 2       | OFF                 | ON  | OFF | OFF | OFF      | OFF  | Pack3       |
| 3       | ON                  | ON  | OFF | OFF | OFF      | OFF  | Pack4       |
| 4       | OFF                 | OFF | ON  | OFF | OFF      | OFF  | Pack5       |
| 5       | ON                  | OFF | ON  | OFF | OFF      | OFF  | Pack6       |
| 6       | OFF                 | ON  | ON  | OFF | OFF      | OFF  | Pack7       |
| 7       | ON                  | ON  | ON  | OFF | OFF      | OFF  | Pack8       |
| 8       | OFF                 | OFF | OFF | ON  | OFF      | OFF  | Pack9       |
| 9       | ON                  | OFF | OFF | ON  | OFF      | OFF  | Pack10      |
| 10      | OFF                 | ON  | OFF | ON  | OFF      | OFF  | Pack11      |
| 11      | ON                  | ON  | OFF | ON  | OFF      | OFF  | Pack12      |
| 12      | OFF                 | OFF | ON  | ON  | OFF      | OFF  | Pack13      |
| 13      | ON                  | OFF | ON  | ON  | OFF      | OFF  | Pack14      |
| 14      | OFF                 | ON  | ON  | ON  | OFF      | OFF  | Pack15      |
| 15      | ON                  | ON  | ON  | ON  | OFF      | OFF  | Pack16      |


















Inverter communication protocol Select CAN communication (select by DIP 5 and 6 in host mode)

|    |     |     |     |     |     |     |   |
|----|-----|-----|-----|-----|-----|-----|---|
| 1  | OFF | OFF | OFF | OFF | OFF | OFF | Supports host computer/display Select the inverter protocol |
| 17 | OFF | OFF | OFF | OFF | ON  | OFF | Victron   |
| 33 | OFF | OFF | OFF | OFF | OFF | ON  | Pylon   |
| 49 | OFF | OFF | OFF | OFF | ON  | ON  | Geowatt   |

Inverter communication protocol RS485 communication (Select DIP 5 and 6 in host mode)

|    |     |     |     |     |     |     |   |
|----|-----|-----|-----|-----|-----|-----|---|
| 1  | OFF | OFF | OFF | OFF | OFF | OFF | Supports host computer/display Select the inverter protocol |
| 17 | OFF | OFF | OFF | OFF | ON  | OFF | SRNE  |
| 33 | OFF | OFF | OFF | OFF | OFF | ON  | Voltronic   |
| 49 | OFF | OFF | OFF | OFF | ON  | ON  | Geowatt   |

## 4.5 Inverter pins definition

| Inverter manufacturer | Communication mode | BMS DIP switch mode of the host   | Inverter interface definition | Use standard network cables |
|-----------------------|--------------------|---|-------------------------------|-----------------------------|
| Growatt-SPF           | CAN                |    | 4H,5L                         | OK                          |
| Growatt-SPF           | 485                |    | 1B,2A                         | OK                          |
| Growatt-SPH           | CAN                |    | 4H,5L                         | OK                          |
| Goodwe                | CAN                |    | 4H,5L                         | OK                          |
| Solis                 | CAN                |    | 4H,5L                         | OK                          |
| Sofar                 | CAN                |    | 1H,2L                         | Customized network cable    |
| SMA                   | CAN                |    | 4H,5L                         | OK                          |
| Victron               | CAN                |    | 7H,8L                         | Customized network cable    |
| Luxpower              | CAN                |  | 4H,3L                         | Customized network cable    |
| Deye                  | CAN                |  | 4H,5L                         | OK                          |
| Sorotec               | CAN                |  | 4H,5L                         | OK                          |
| Megarevo              | CAN                |  | 4H,5L                         | OK                          |
| Voltronic             | 485                |  | 3B,5A                         | Customized network cable    |
| SRNE                  | 485                |  | 7A,8B                         | Customized network cable    |
| senergy               | CAN                |  | 4H,5L                         | OK                          |
| Sol-Ark               | CAN                |  | 4H,5L                         | OK                          |
| MPP Sola              | 485                |  | 3B,5A                         | Customized network cable    |
| Sacolar               | CAN                |  | 4H,5L                         | OK                          |
| TRONTE                | 485                |  | 3B,5A                         | Customized network cable    |



## 6.1 Battery Pack Test Requirements

The tested battery pack has left the factory for no more than one month. If it is not tested due to other reasons such as transportation, the battery pack can be charged and discharged again and then tested.

All tests in this specification should be carried out under standard atmospheric conditions :  
temperature : 15–26 °C ; Relative humidity : 65 ± 20%.

The standard charging voltage of the battery pack is 58.4 V, the standard discharge cut-off voltage is about 40V, and the standard current is 0.2 C.

## 6.2 Standard charging

Use a special test cabinet for lithium-ion battery pack to charge with standard charging voltage, standard current, constant current and constant voltage until the current drops to 0.05 A.

## 6.3 Standard discharge

Use a special test cabinet for lithium-ion battery pack to discharge at standard current and constant current until the standard discharge cut-off voltage or the battery pack cut-off.

## 7. Warnings:

- (1) Do not use the battery if it has been impacted or if there is noticeable deformation.
- (2) Do not stack or assemble the batteries improperly. Please pay attention to the battery polarity and the connection terminals.
- (3) Insulate equipment properly and use tools and instruments correctly.
- (4) The battery installation area should be kept away from fire sources or any combustible materials. Ensure adequate ventilation and that the area is dry.
- (5) Plugging in kits while the product is operating is strictly prohibited.
- (6) Do not support series connection. Series connection will cause irreversible damage to the batteries.
- (7) Please fully charge the battery with the specified charger before using new batteries or after long periods of storage.
- (8) Do not disassemble, open, squeeze, bend, deform, pierce, or damage the product.
- (9) Do not attempt to modify or insert any external objects into the product. Avoid exposing the product to liquids such as saltwater, freshwater, or beverages (e.g., coffee, juice, etc.). Keep it away from fire sources, explosive materials, or other hazards.
- (10) Do not short circuit the battery. Ensure the battery terminals do not come into contact with metal or other conductive materials.
- (11) Do not drop the battery. If this occurs (especially if it hits a hard surface), please contact the service center immediately.
- (12) If there is any electrolyte leakage, avoid contact with skin or eyes. If contact occurs, rinse the affected area thoroughly with clean water and seek medical attention.
- (13) Do not disassemble the cell battery under any circumstances. This may cause an internal short circuit, fire, or other hazards.
- (14) Do not burn or expose the battery to fire under any circumstances. Doing so may cause the battery to catch fire.
- (15) When connecting multiple battery packs in parallel, if your load exceeds 200A, use multiple terminals for parallel output. The chassis terminals cannot withstand currents exceeding 200A. Prolonged use of high current is not recommended, as it may cause the cables and terminals to overheat.

## **8. Other technical indicators**

For any matters not covered in this manual and other related parameters, please contact our sales or technical staff if you need assistance. We will provide as much information as possible. Thank you for your understanding. You are welcome to visit our company website or call our customer service hotline at any time for more product information.

## **9.Special Statement (Users Need to Know)**

Before purchasing and using the product, users should be aware of the special nature of lithium battery products and the risks associated with improper use. It is essential to read this product manual carefully and to have individuals with the necessary technical skills and knowledge operate the product. The technical performance, safety performance, and quality standards indicated for this product apply only when users meet the technical, environmental, and skill requirements and follow the correct operating procedures.

Improper use, including incorrect methods, faulty connections, inappropriate power adapters, or load parameters that do not comply with the performance specifications indicated in this manual, may cause damage to the product and jeopardize the safety of users and their property. Any product damage or other losses resulting from improper use by the user do not fall under product quality issues, and the company will not assume any related responsibilities. Our R&D center will continuously improve and upgrade the product in terms of technology, performance, and operation. Users are encouraged to regularly check our company website or contact our sales engineers for the latest product information.

This product must comply with the following management standards and conditions (not limited to) for usage, storage, and application:

This product is strictly prohibited from being used for any purpose that violates the laws and regulations of the local country.

This product is strictly prohibited from being used in areas that violate the environmental and location requirements for lithium batteries.


This product must not be used, charged, or stored in residential buildings or crowded areas that are fire safety risk zones.

This product must not be used, charged, or stored beyond the prescribed technical standards.

This product must not be disassembled, modified, or integrated in any unauthorized manner.

This product should not be stored together with any flammable or explosive materials or other similar products in violation of regulations.

## 10. Standard Packaging

| Item  | Picture  | Qty. |
|---|--|------|
| LN-48300W<br>Battery pack                             |  A white, rectangular battery pack with a black top panel and a small display screen on the top left. It has four small feet at the bottom. | 1    |
| RS485 to USB<br>upper computer<br>communication cable |  A black cable with a USB-A connector on one end and an RS485 connector on the other.   | 1    |
| Inverter<br>communication cable                       |  A black cable with a USB-A connector on one end and an RS485 connector on the other.  | 1    |
| Inverter<br>Connection Cables<br>(+ and -)            |  A white, braided cable with two red connectors on one end and two black connectors on the other.   | 1    |
| WiFi module   |  A small, black, rectangular module with a gold-colored connector on one end.   | 1    |